



1

INSTALL THE BRACKETS

The brackets offer two methods of installation:

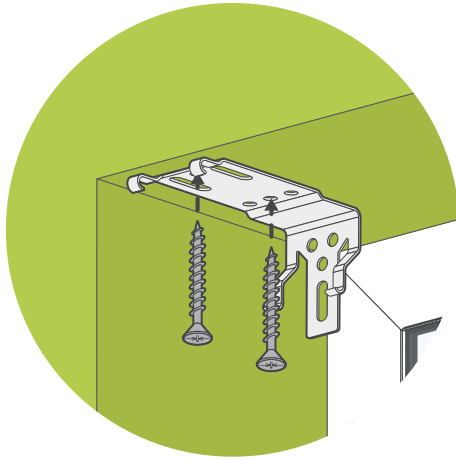

Top-Fix

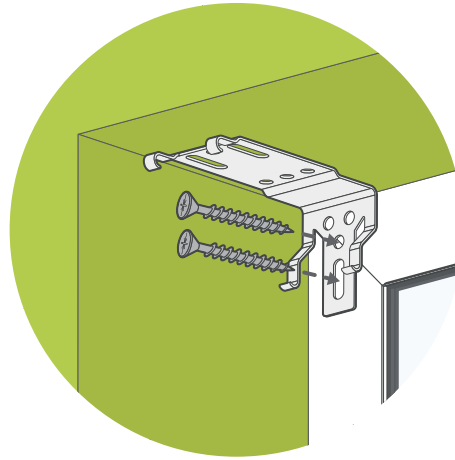


Face-Fix



Note that the position of the outermost brackets should be at least 5cm away from the ends of the rail, with any other brackets evenly distributed across the width.


2

INSTALL THE BLIND

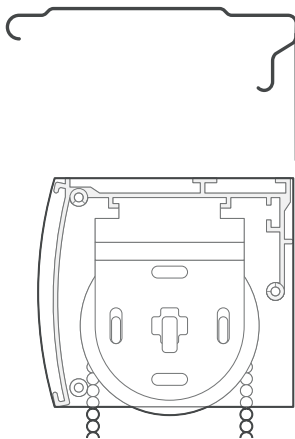


Bracket
(side-on)


Blind
(side-on)

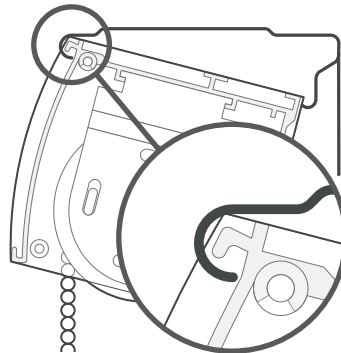


Holding the rail at an angle, situate the front lip of the cassette into the front lip of the bracket.

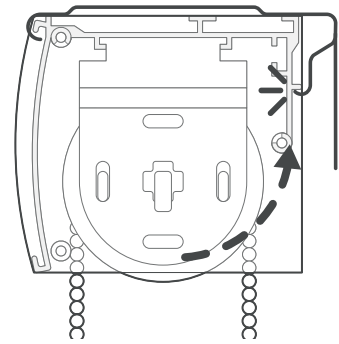

Twist the back of the cassette upwards until it snaps into place against the back lip of the bracket.

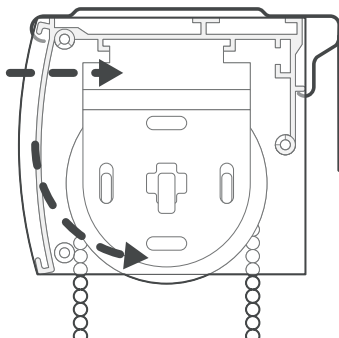

To release the blind from the brackets at any point after installing, push firmly against the front of the cassette to release it from the front lip of the bracket. At the same time, twist the front of the cassette downwards, this will release the blind from the bracket.

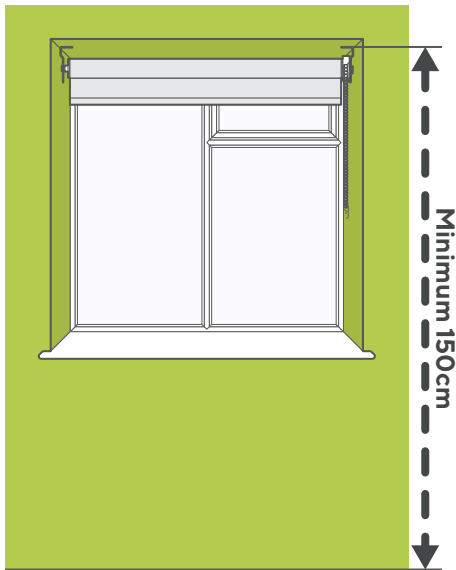

For safety reasons, always ensure that the top of the blind is installed at least 150cm (1500mm) from the floor.


3

CHILD SAFETY

Cord Tensioner



Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

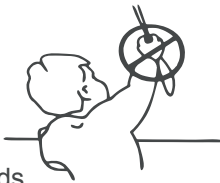

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

The cord retaining device must be installed at the maximum distance possible from the control mechanism to prevent looped cords from becoming slack.

Place the retaining device on the wall and mark the position of the screw hole(s) with a pencil.

Attach the retaining device to the wall using the fixings provided.

