



1

INSTALL THE CASSETTE

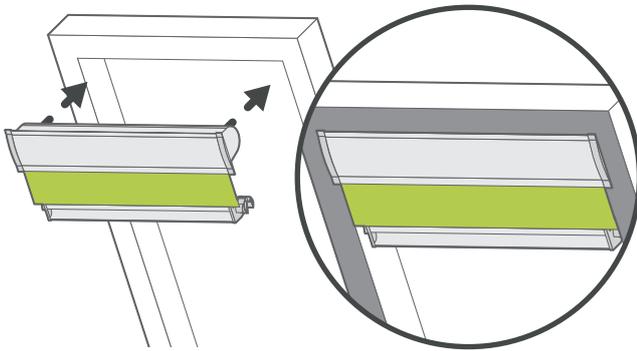

Place the cassette into the top of the window.

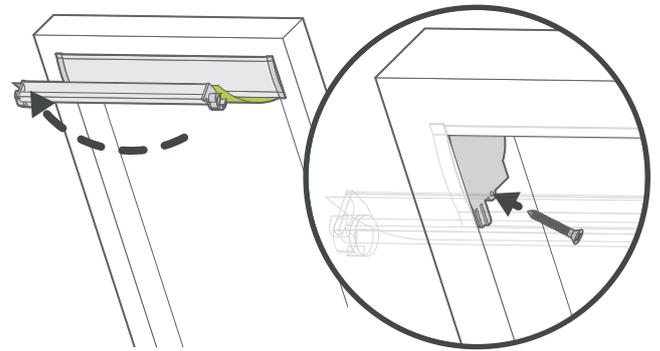

Hold the bottom bar out of the way so you can access the screw holes on the underside of the cassette, on the far left and right. Use one screw at each side to hold the cassette in place.

Top Tip


Be careful not to over-tighten the screws; as long as you tighten them enough that the screw heads touch the plastic, that's tight enough to hold the cassette.

2

INSTALL THE SIDE CHANNELS



Ensure that the handle is central to the fabric, with an even amount of fabric overlapping at each side. If it has shifted to one side in transit, simply slide it the other way to centralise it before continuing.

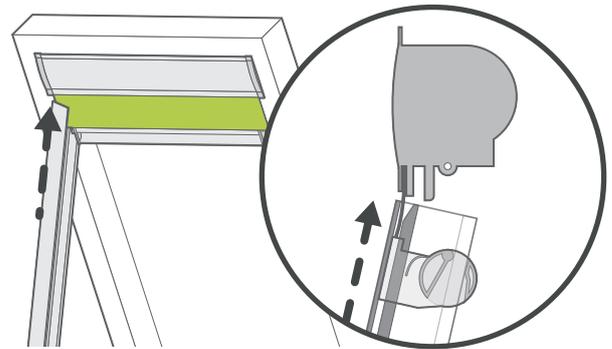


Pull the blind down just far enough to slide the fabric into the channel. The end of the channel has been angled outwards to allow the fabric to feed neatly into place.



Slot the channel into place just under the cassette fascia (there is a small tab to guide the channel into place - the front of the channel should site between the fascia and this tab).

Continued on Next Page


INSTALL THE SIDE CHANNELS (CONTINUED)

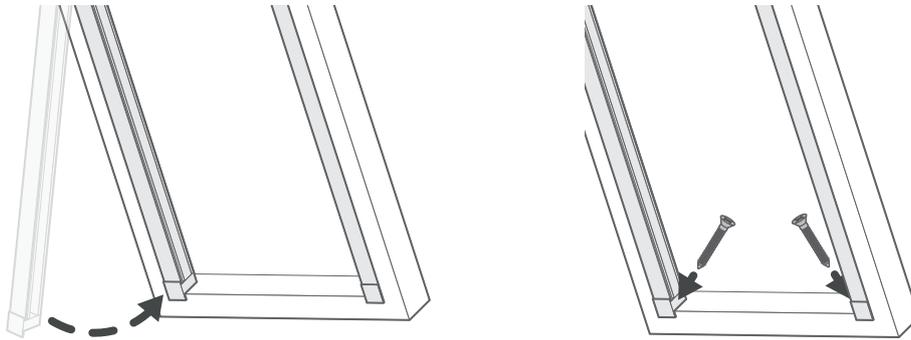


Push the bottom of each channel firmly into place at the bottom of the window, ensuring it sits tight and straight against the side of the window frame. Use one screw through the eyelet at the bottom of each channel to secure them in place.

3

OPERATING THE BLIND

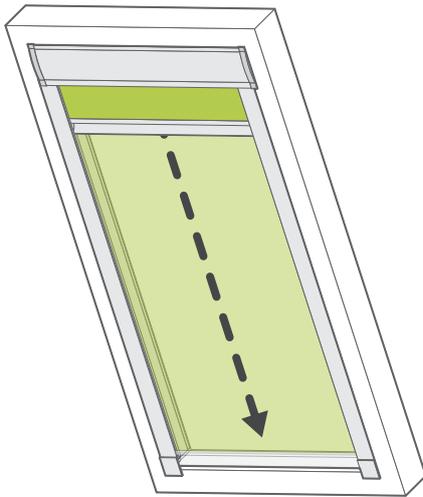

To lower the blind simply pull the handle downwards. The blind will remain in position when you let go.

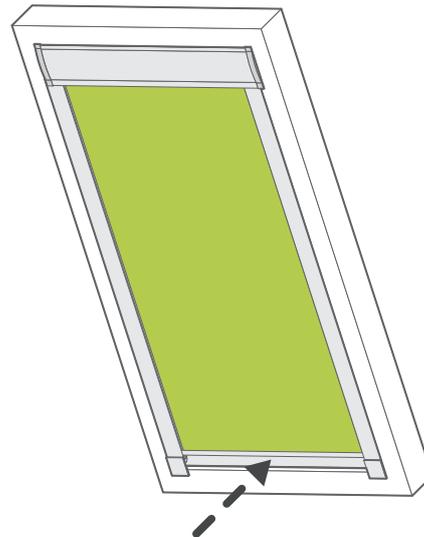

To raise the blind, push the handle back towards the glass and hold it in this position. This will release the lock holding the fabric in place and allows the blind to raise. Let go of the handle at any point to stop.