

 
# How to fit and operate your Roller blind

# Web-Blinds


• WE MAKE IT, YOU FIT IT •

## You should have:

First check you've got all the fittings that come with your blind.




**Top fixing bracket:** x 2

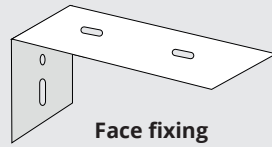

**Face fixing plate:** x 2



 **Safety hook:** x 1



**Wood screws:** x 4



**Bracket connector screw & nut:**  
(For fixing bracket to face plate): x 2

Standard fixings for the most common installations supplied

## Getting started

### YOU WILL NEED:

- A drill with correct bit
- A crossheaded screwdriver
- A metal tape measure
- A pencil

- Your brackets are packed separately in the box. Please ensure you've located them before disposing of the packaging.
- The brackets are a universal type that can be used to top fix the blind into a recess or face fix into a frame or a wall.
- Please read the following instructions carefully before you start fitting your blind.

1


### To position the brackets



The position that you place the outermost brackets must be 5cm away from the end of the rail

Any additional brackets (supplied for wider blinds) can then be evenly distributed across the rest of the width

Use a pencil to mark the window area where the brackets will be positioned

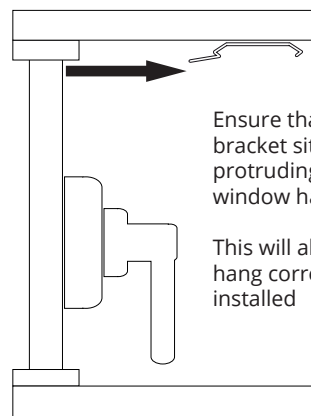

Ensure that the back of the bracket sits clear of any protruding items such as window handles or vents

This will allow the blind to hang correctly once installed



2

### To fit the brackets

#### Top fixing

Use the single hole on the top of the bracket for fixing to the ceiling or the underside of a recess

The protruding tab should sit at the back, closest to the window

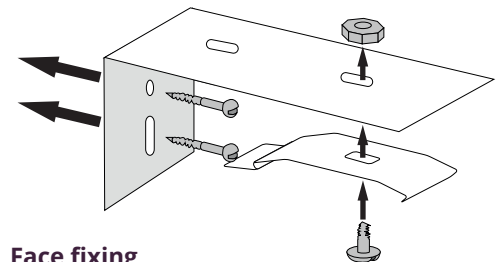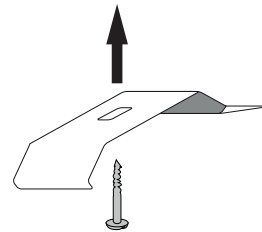


#### Face fixing

Join the bracket to the 'L' shaped face-fixing plate


Use two screws through the back plate to mount the brackets to the facing surface behind the blind

3

### To fit the blind

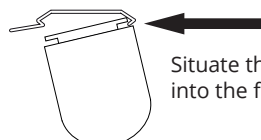

Situate the front lip of the headrail into the front of the bracket

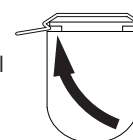

Push the back of the headrail upwards to engage the metal clip at the back of the bracket

## Safety tips:

There are things that you can do to reduce risk in your home.

- Move beds, cots and furniture away from the window.
- Do not let cords or chains hang loose. Make sure they are kept out of reach of children at all times.
- Do not tie loose cords and chains together.
- Check the condition of all safety devices if not used regularly and replace if the device is faulty.

## Operating your blind:

Operating your blind is easy. Just follow these instructions.

### CHAIN OPERATED

- Simply pull the chain to move the blind up and down.

# How to fit and use your Child Safety Devices

4

## Warning

Blinds can be potentially dangerous to small children. Please be aware that swallowing small parts can cause internal asphyxiation. Looped or low hanging cords, chains or tapes can create hazardous loops which could lead to the risk of strangulation. We do everything we can to ensure your chosen product is child safe. As a minimum all of our blinds meet the European Standard BS EN 13120 for safety. Our instructions and the supplied Child Safety device(s) are intended for you to ensure that your blind is as safe as possible.

The information below gives guidance for fitting the provided child safety devices. All safety devices must be correctly installed for the protection from strangulation of young children and the proper use of the blind. Please read the instructions carefully and keep safe for future reference.

5

## Sidewinder Roller

### Fitting the safety hook

1. Put the control chain into the hook at the maximum distance from the control mechanism. Ensure that the chain is taut and that the hook is at the bottom of the loop.
2. Screw the hook to a wall adjacent to the blind. If the hook has a slot, ensure the screw is placed at the bottom of the slot and that the chain is taut before screwing in place. This will prevent the hook from moving up and down during operation and ensure that the correct tension is maintained.

