


1

BEFORE YOU BEGIN


The front roller blind is the highest and closest to you, so make sure that when marking the place where you will place the brackets, the rounded part of the bracket is pointing downwards.

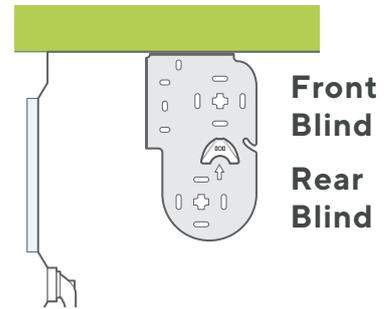


2

INSTALL THE BRACKETS


The brackets offer three methods of installation:

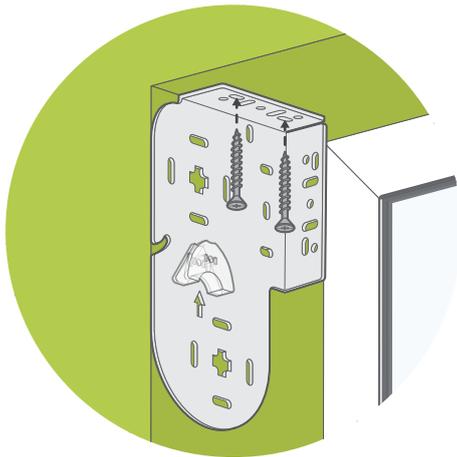

Top-Fix

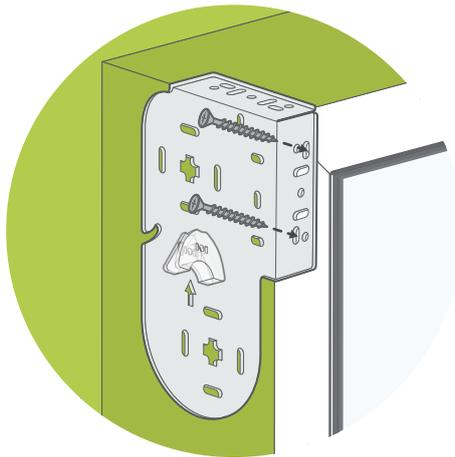


Face-Fix

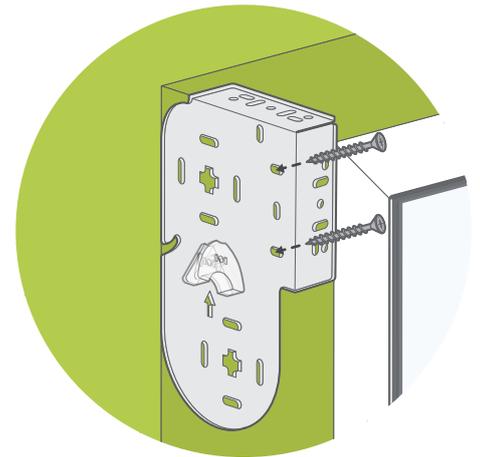

Side-Fix


Top Tip

Top-fixing or face-fixing are recommended for most installations, but we only recommend side fixing if the width you gave us was taken right at the top of the recess.

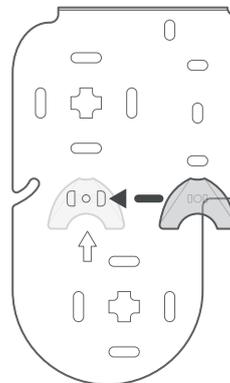

Control Side


On the control side, clip the chain runner attachment into the slot in the center of the bracket.

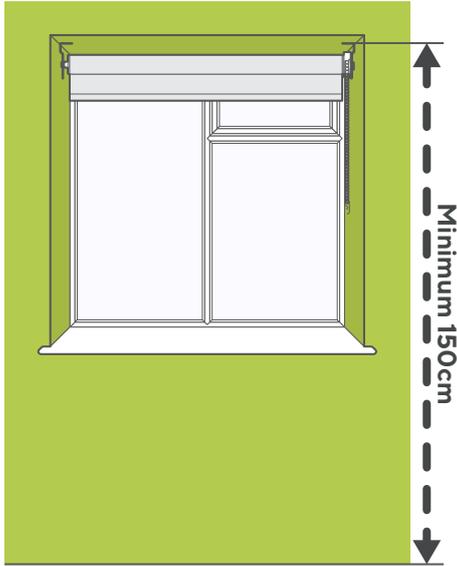


For safety reasons, always ensure that the top of the blind is installed at least 150cm (1500mm) from the floor.

3


INSTALL THE BLIND

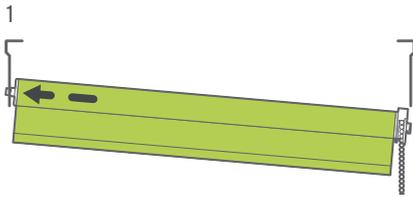



Install the rear blind first. Begin by placing the spring-loaded pin into the lower cross-shaped hole on the bracket. Push the blind toward the bracket so the spring-loaded pin depresses.

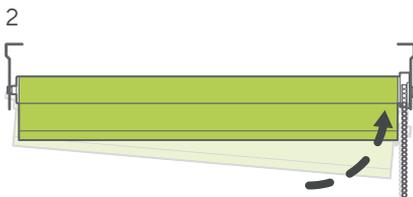

Keeping the pin depressed, lift the sidewinder end of the blind upwards so the blind is level and the chain is hanging directly down from the bottom of the sidewinder and slot the pegs of the control into the cross section of the bracket.

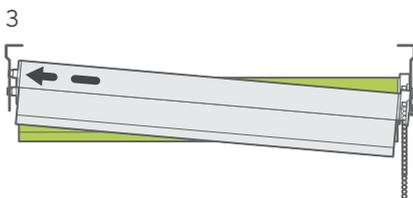

Repeat the process for the front blind placing the pin into the cross-shaped hole on the bracket and lifting the sidewinder side up to slot into the cross section.

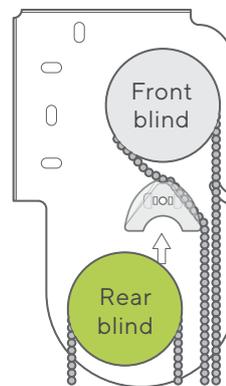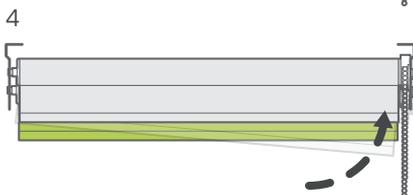


Take the chain for the top (front) blind and drape the back part of the chain over the chain runner so that the chain sits forward, preventing it from tangling with the other blind's chain.

Cord Tensioner



Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

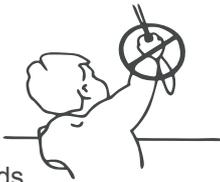

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

The cord retaining device must be installed at the maximum distance possible from the control mechanism to prevent looped cords from becoming slack.

Place the retaining device on the wall and mark the position of the screw hole(s) with a pencil.

Attach the retaining device to the wall using the fixings provided.

