



1

LOCATE THE BRACKETS

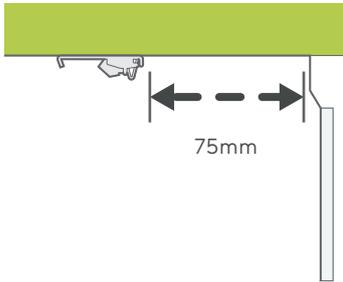


If you are using top-fix brackets, the front edge of the bracket must be at least 75mm (3") away from the facing surface behind the rail. This will ensure that the waves in the fabric do not brush against the wall or window behind.

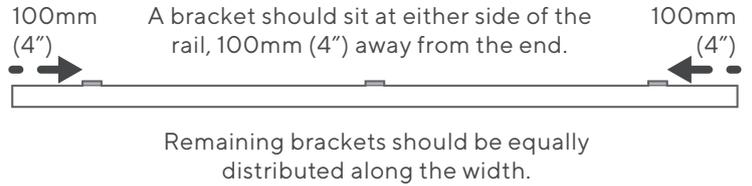


2


INSTALL THE BRACKETS

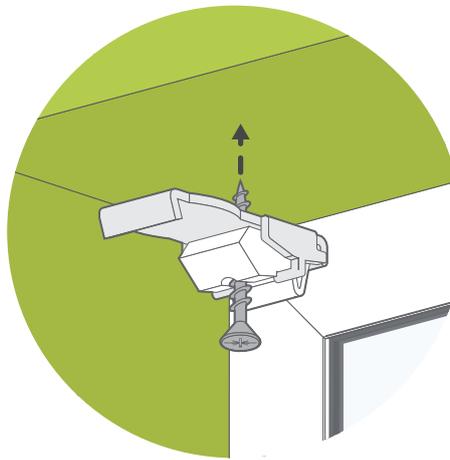


Top-Fix

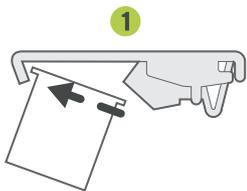


1 Locate the front lip of the curtain headrail into the front hook of the bracket.

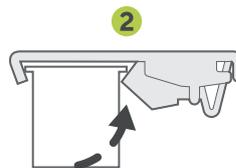

2 Rotate the headrail so that the back lip slots into the locking part of the bracket.

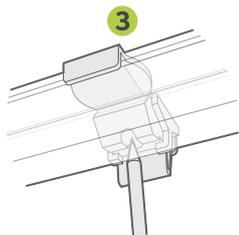


3 Hold the rail up to the fitting surface and mark out the screw holes with a pencil.

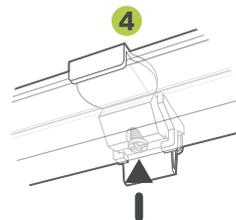


4 Put the rail safely to one side and drill holes where you marked out the brackets, then insert a rawl plug into each hole. Use a single screw for each bracket, through the centre hole in the top of the bracket.


INSTALL THE BRACKETS (CONTINUED)

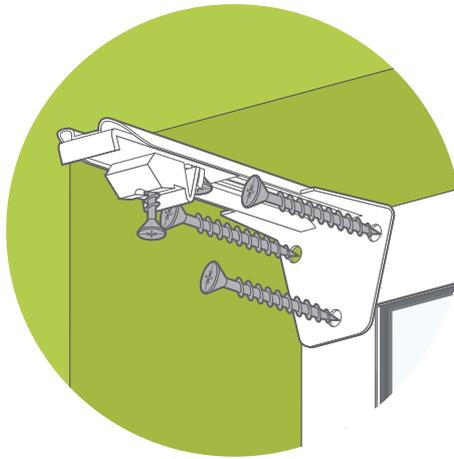


Face-Fix

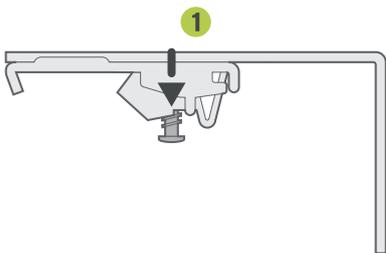


Loosen the screw in the centre of the top of the bracket enough to allow the locking part to move back and forth.

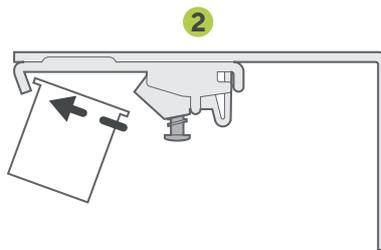


Locate the front lip of the curtain headrail into the front hook of the bracket.

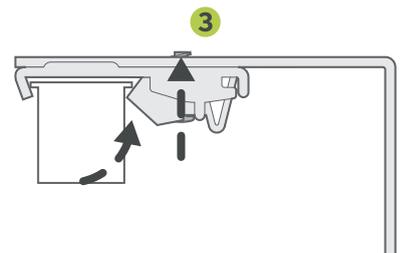

Rotate the headrail so that the back lip slots into the locking part of the bracket, then tighten the bracket screw to secure the rail in place.

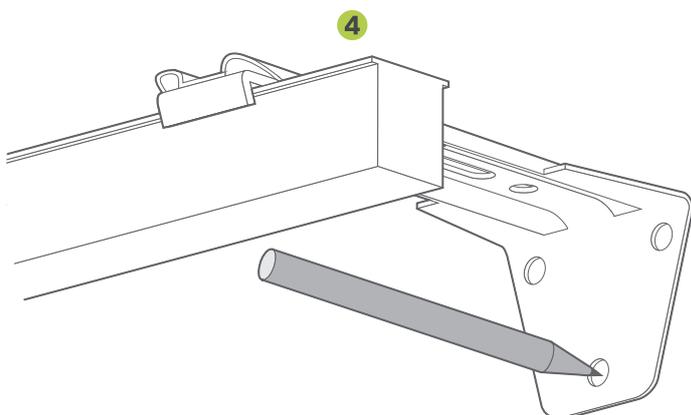


Place the rail and brackets up against the fixing surface and mark out the screw locations with a pencil.

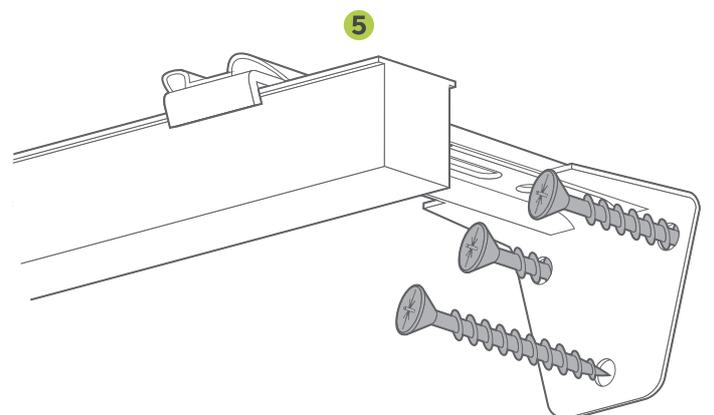


Put the rail safely to one side and drill holes where you marked out the brackets, then insert a rawl plug into each hole. Use a single screw for each bracket, through the centre hole in the top of the bracket.

3


HANG THE CURTAINS

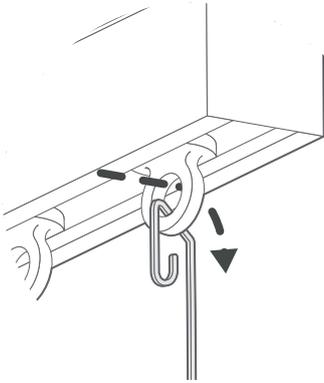

Insert the hooks into the plastic eyelets in the headrail.

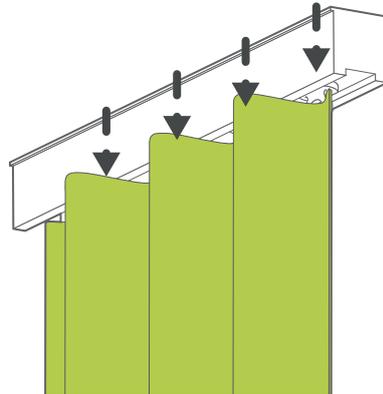


Continue until all of the hooks are inserted, then enjoy your beautiful new curtains!

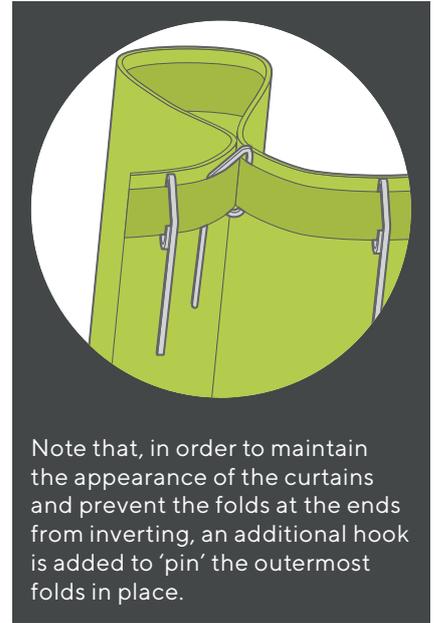

Note that, in order to maintain the appearance of the curtains and prevent the folds at the ends from inverting, an additional hook is added to 'pin' the outermost folds in place.

4


DRESS THE CURTAINS

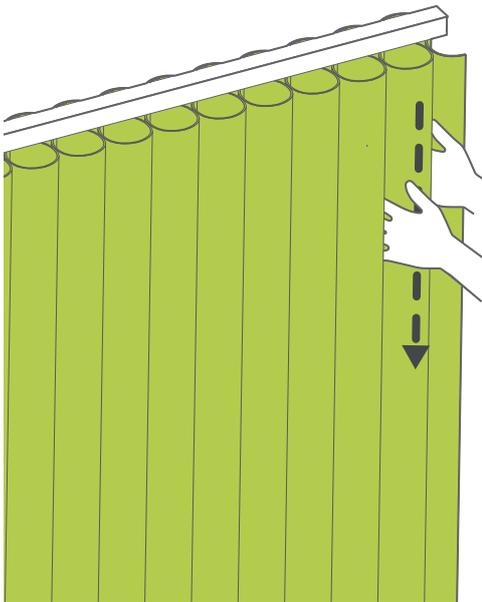

As curtains are a soft fabric product, a little dressing is sometimes required to finish the installation perfectly.

'Stack' the curtains over to the sides and check that the folds are all even in size and shape.

Starting from the outside edge, work from the top downwards and run your hands firmly down the length of each fold.

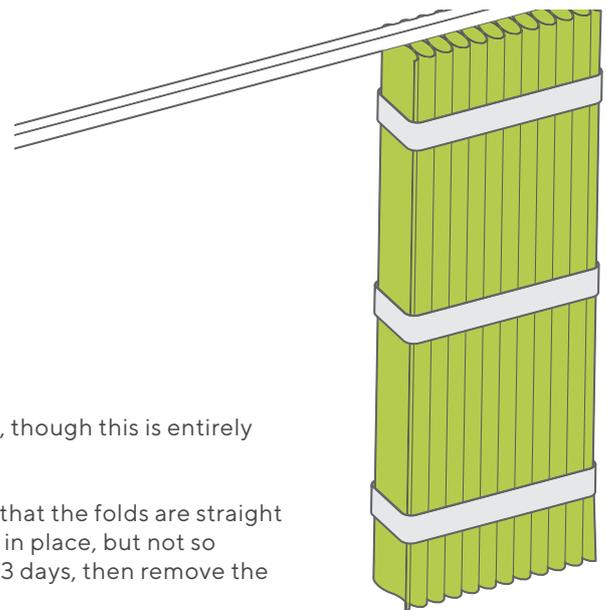

For a really professional finish, you can even 'bandage' the curtains, though this is entirely optional.

Wrap several runs of spare fabric around the curtains, making sure that the folds are straight and even as you do so - wrap them tightly enough to hold the folds in place, but not so tightly that they squeeze the fabric. Leave them bandaged for 2 or 3 days, then remove the bandages and you should find the folds are perfect.

Top-Tip:

When you first unpack your curtains they may be quite creased - this is normal, as they've been folded and packed for transit. These creases will hang out over time and we recommend leaving them to do so. If you have access to an upright steamer though, you can try lightly steaming the fabric (on a low setting) to encourage those creases to drop out faster.